



World Travel Clock

with 18 cities



63-310
User's Guide

1/1

Please read this user's guide before using your new clock.

Package contents

- World Travel Clock
- User's Guide


Features

- Built-in alarm
- Shows date, time and indoor temperature
- Built-in flashlight

① Install Batteries

Insert two AAA batteries for the clock and three LR44 batteries for the flashlight.

- Lift the battery compartment cover.
- Insert the supplied three LR44 batteries and two AAA batteries (not included) into the compartment as indicated by the polarity symbols (+ and -) marked inside.

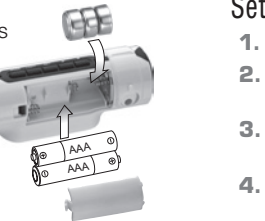

For easy installation, install the middle LR44 battery last.

2

- Replace the cover.

Battery Notes

- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.
- Replace the batteries if the light is dim and the display is unclear.
- Dispose of batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries (alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the clock for a long time, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

② Set the Clock

Setting the time

- Rotate the dial to choose the time zone location.
- Press **SET** to set as local time. The **HOME TIME** icon appears.
- Press **SET** again to enter time format mode, and press **▲** or **▼** to choose **12Hr** or **24Hr**.
- Press **SET** again to enter time, date, and display language for day-of-week settings.

3

Press **▲** or **▼** to set, and press **SET** again to confirm.

- Rotate the dial to another location. The current time of that area and the **WORLD TIME** icon appears. If the area is in daylight saving time, the icon appears.

- In normal time display mode, press **▼** to switch °F/°C/second on the display.

Note: You will need to set the clock settings again whenever you remove or replace the AAA batteries.

Cairo and Rio De Janeiro DST

The daylight saving time in Cairo and Rio De Janeiro are adjusted differently from normal DST.

- For Cairo, the clock starts daylight saving time automatically on the last Friday in April, at 12:00 am (0:00), and ends on the last Friday in August at 12:00 am (0:00).
- For Rio De Janeiro, daylight saving time starts on the third Sunday in October at 12:00 am (0:00), and ends on the second Sunday in February at 12:00 am (0:00).

Select daylight saving time manually by pressing and holding **▲** for 2 seconds in time display mode to turn DST on or off.


4

- Select time, date, or language.
- Activate or deactivate the alarm.
- Activate or pause countdown time.
- Switch between daylight saving time and normal time display.

LIGHT/SNOOZE

- Turn on the backlight for 3 seconds.
- Temporarily deactivate the alarm sound.

- Select time, date, or language.
- Change display to show °F/°C/second.
- Resume countdown time or reset to zero.

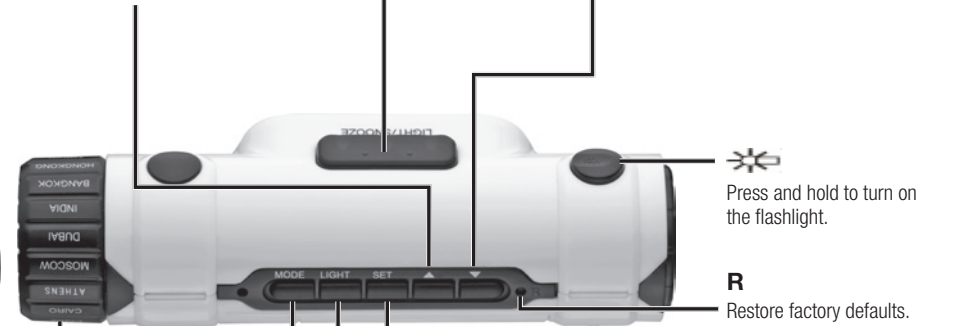

- MODE**
Change modes.
- RESTORE**
Restore factory defaults.
- SET**
Change time, date, and language settings.
- LIGHT**
Turn on the backlight.

5

Setting the Alarm

In time display mode, press **MODE** to enter the alarm mode. The **AL** icon appears. Press **SET** to enter alarm setting, and press **▲** or **▼** to set hour and minute. Press **MODE** to confirm and exit.

- In alarm mode, press **▲** once to activate the alarm, appears; press twice to activate the snooze, **Zz** appears; press a third time to cancel the alarm completely, and **Zz** disappear.
- Activating the alarm without the snooze will generate a continuous alarm for one minute. Press any button to stop the alarm.
- When snooze is activated during an alarm, a one minute alarm repeats every 5 minutes up to 5 times. Press the **LIGHT/SNOOZE** button to temporarily stop the alarm sound (the snooze icon **Zz** keeps flashing). Press any other key to cancel the snooze and turn the alarm sound on again (**Zz** stops flashing).
- Press **MODE** and **▲** to turn off the alarm and snooze completely. The alarm and snooze **Zz** icons disappear.

Setting the Countdown Timer

In time display mode, press **MODE** twice to enter the countdown timer setting mode. The icon **CD**

7

appears. Press **SET**, then press **▲** or **▼** to adjust second, hour and minute. Press **MODE** to exit.

In countdown timer mode:

- Press **▲** to activate or pause countdown.
- When countdown is paused, press **▼** to resume, and press **▼** again to zero if you want to reset.
- When countdown is reached, the clock sounds for one minute. Press any key to stop the sound.

Note: In all modes mentioned above except Timer Mode, if no operation is made within one minute, the display reverts to normal clock time.

③ Use the Flashlight

Press and hold the button to turn on the flashlight.

④ Reset Function

In case of button or display malfunction, gently poke the **Reset Hole** with a pointed object to reset the device to factory default.



Reset Hole

8

Specifications

Power2 AAA Batteries (not included)
.....3 LR44 Batteries

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Ignition L.P. may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

Ignition L.P. warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase. IGNITION L.P. MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a Ignition L.P. Authorized Service Facility; (c) consumables such as fuses or batteries;

(d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase. Ignition L.P. will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Ignition L.P. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

IGNITION L.P. EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, IGNITION L.P. SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF IGNITION L.P. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact Ignition L.P. at: Ignition L.P., 3102 Maple Ave., Suite 450, Dallas, TX 75201

For product support, call
1-866-315-0426



Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.

9

10