



Illustrated Parts List

Model Series

121S00

TYPE NUMBERS
0005 through 2415.









TABLE OF CONTENTS

Air Cleaner	8
Alternator	11
Blower Housing	5
Camshaft	2
Carburetor	9
Carburetor Overhaul Kit	9
Controls	10
Covers/Guards	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	11
Exhaust System	7
Flywheel	5
Fuel Supply	6
Gasket Set - Engine	4
Gasket Set - Valve	3
Governor Spring	10
Ignition	11
Lubrication	6
Operator's Manual	2
Piston/Rings/Connecting Rod	2
Rewind Starter	5
Sump	4
Thermostat	10
Valves	3
Warning Label	2


PRINTED IN U.S.A.



  COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

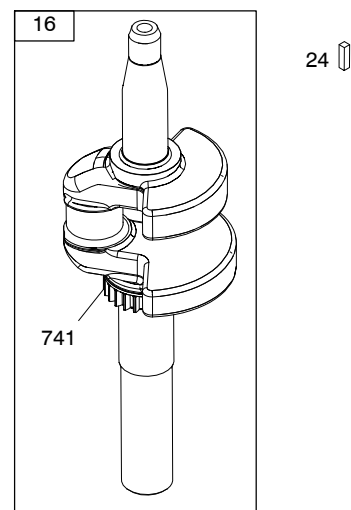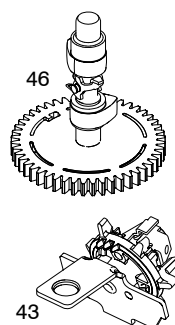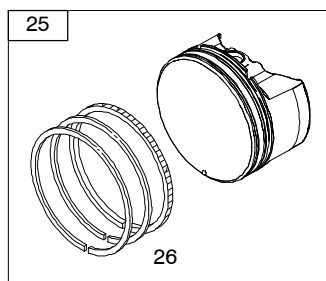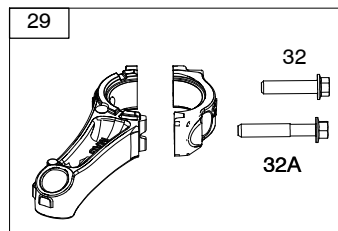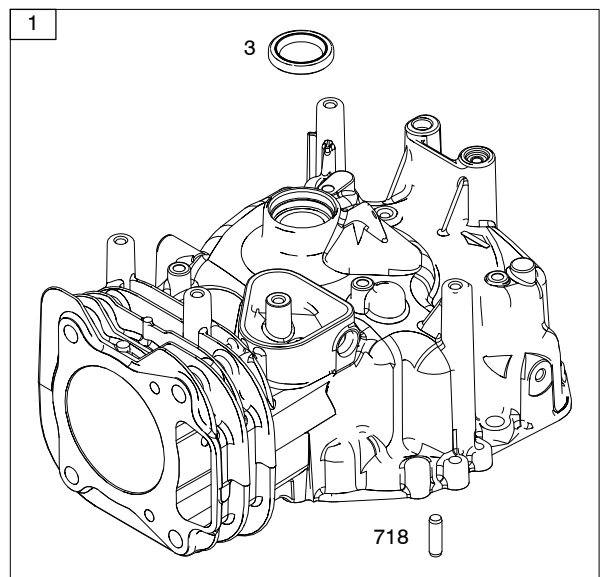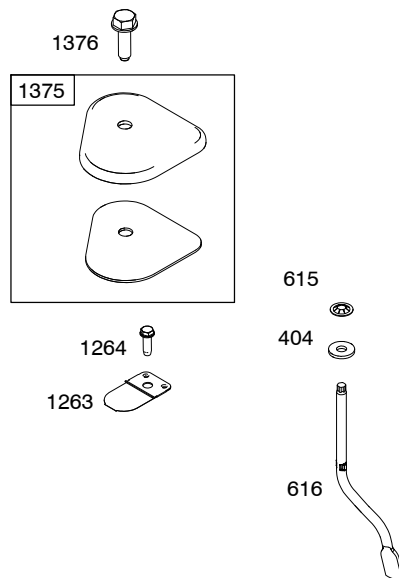


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

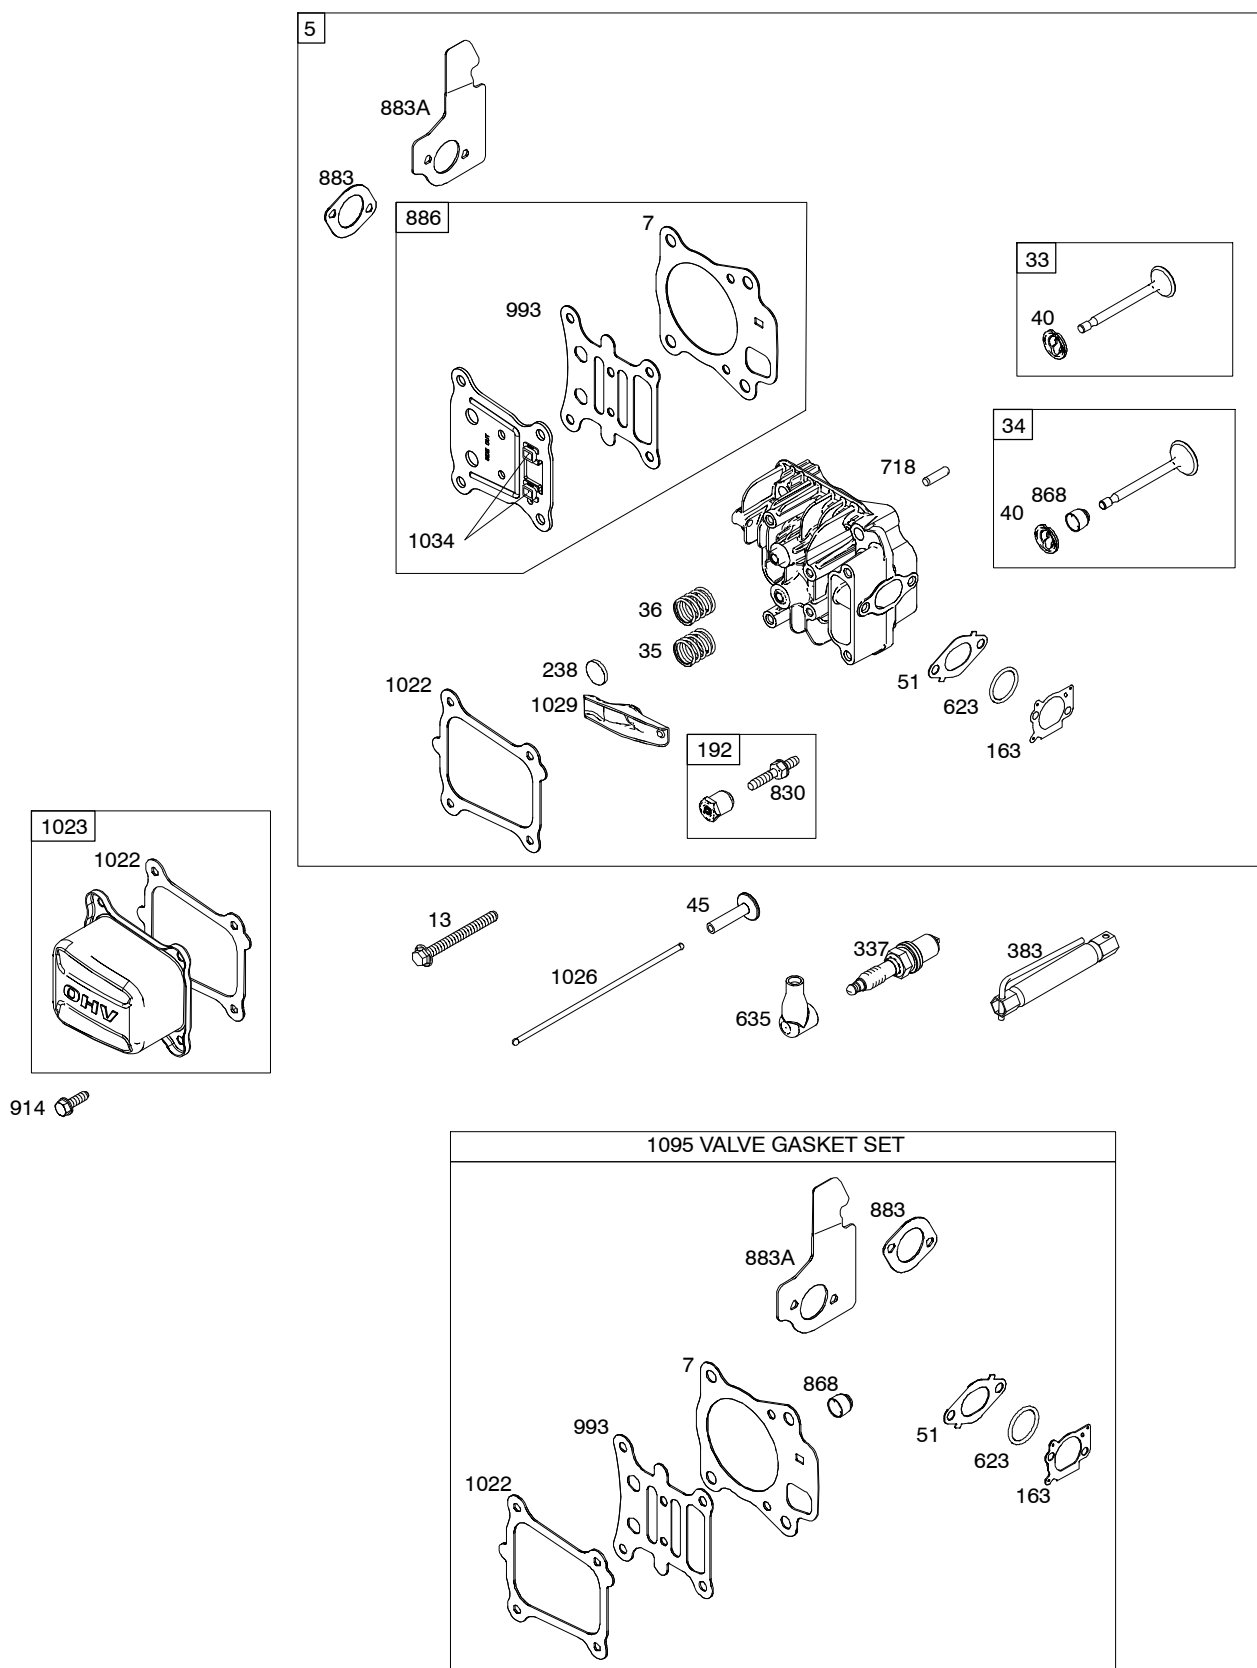



Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

718 

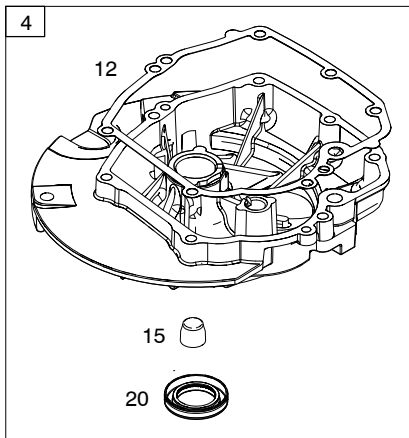


22 



718 

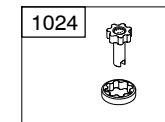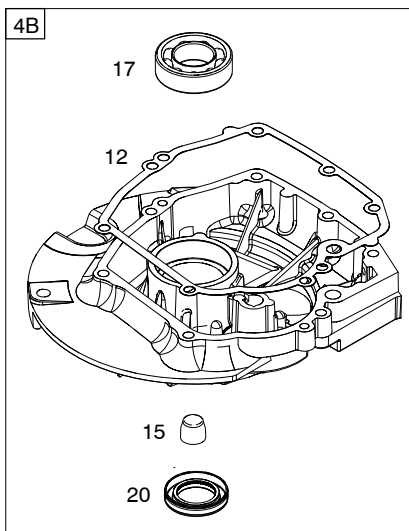


22 

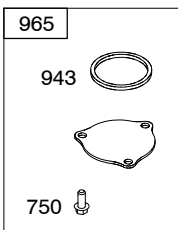







358 ENGINE GASKET SET

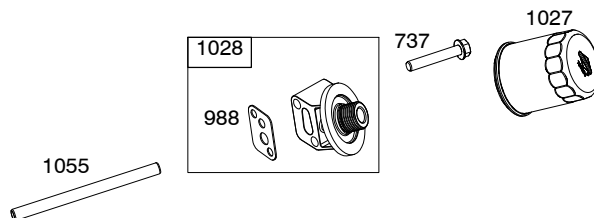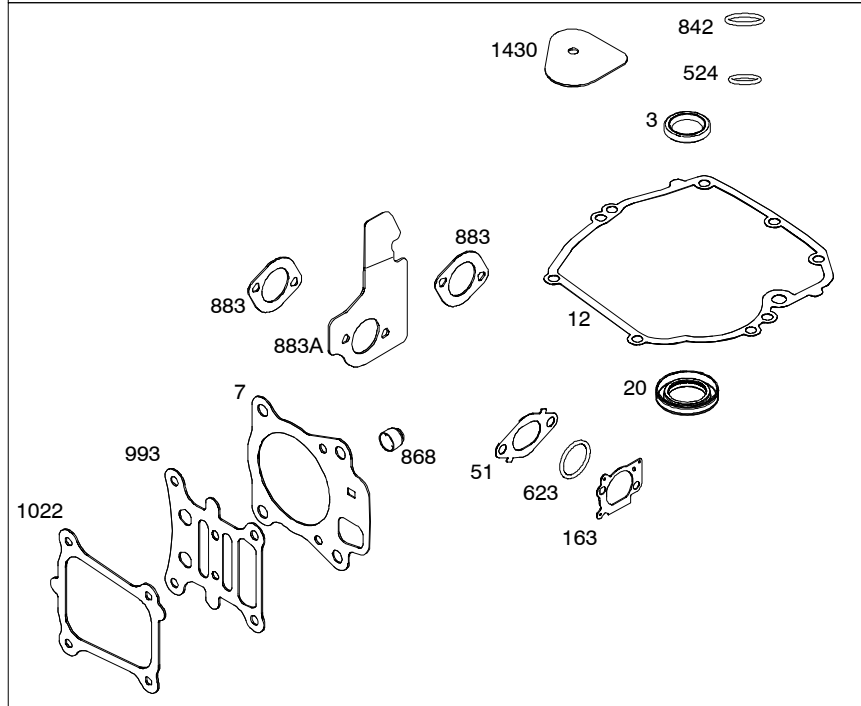





Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

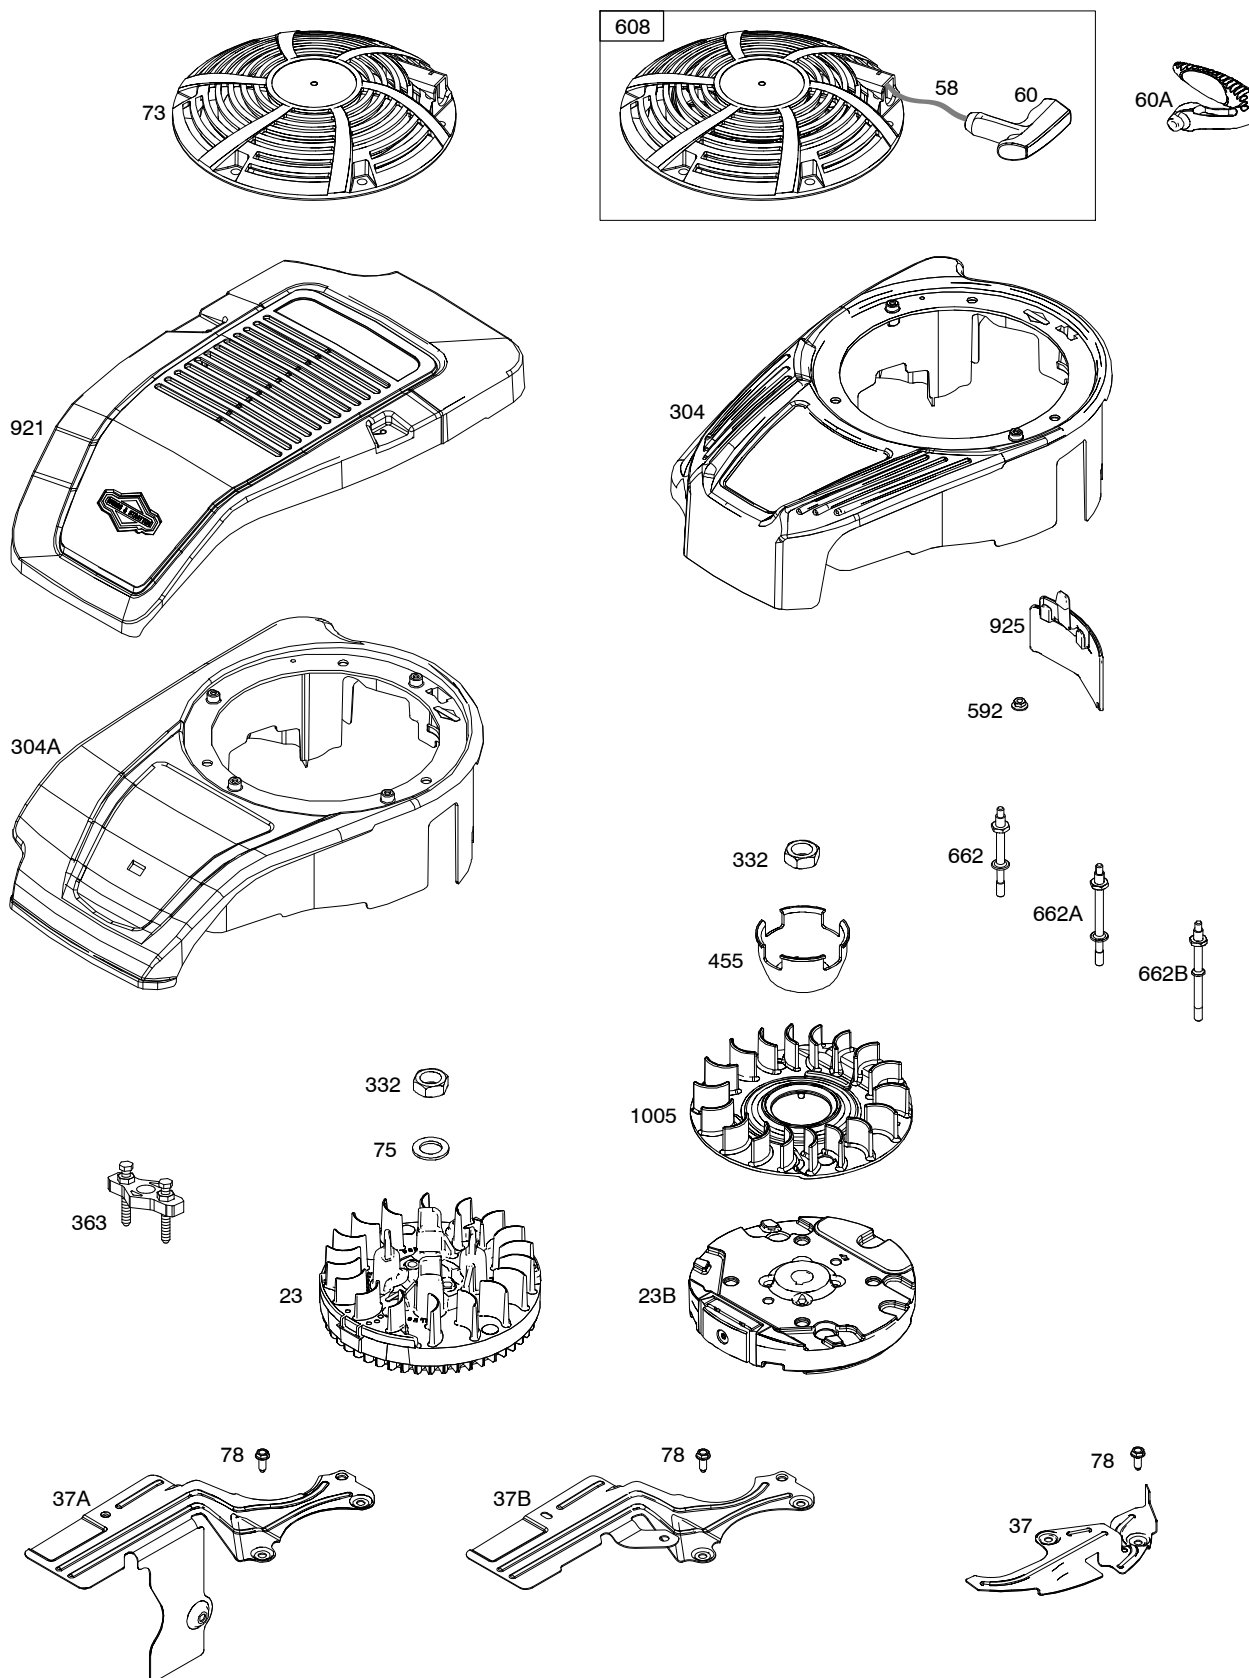


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

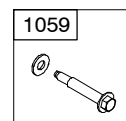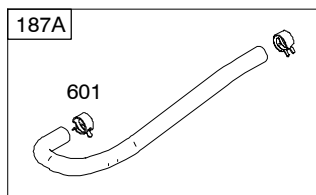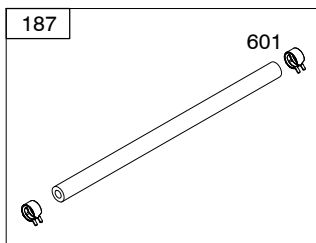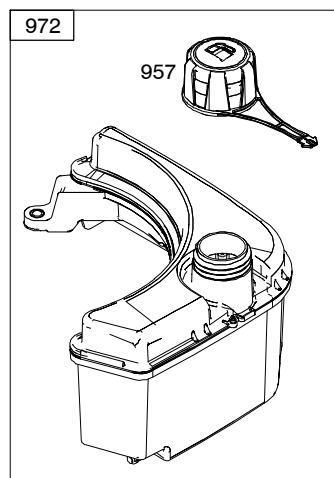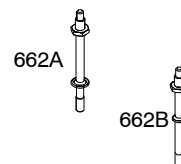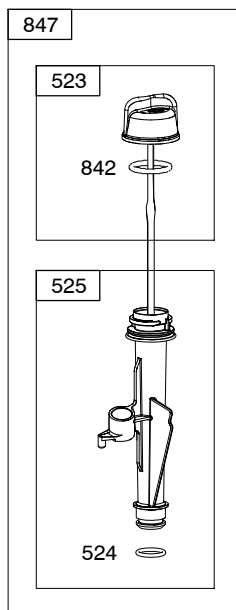


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

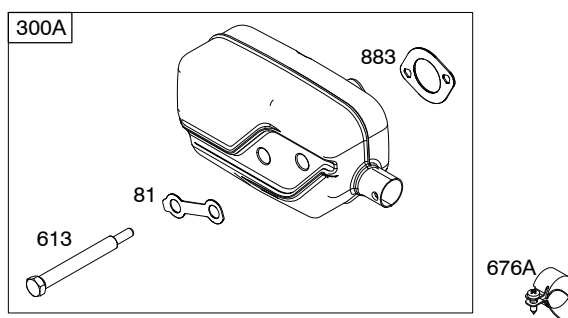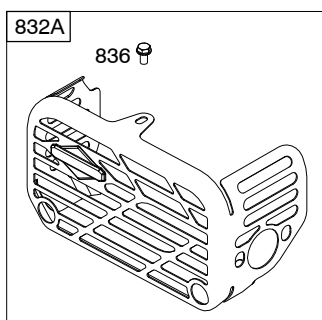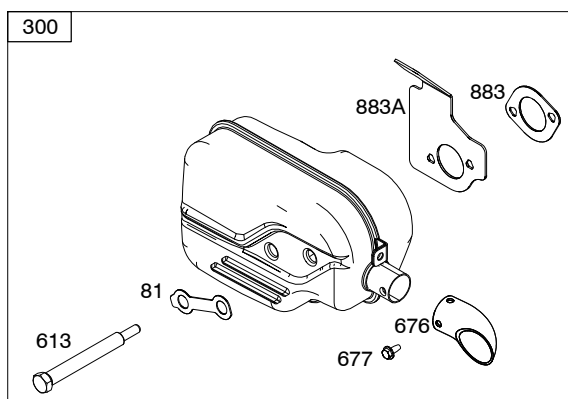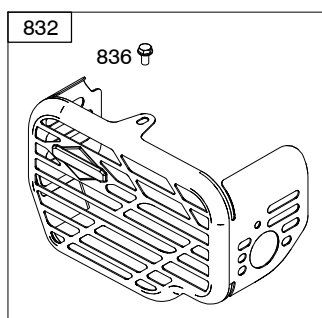






Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

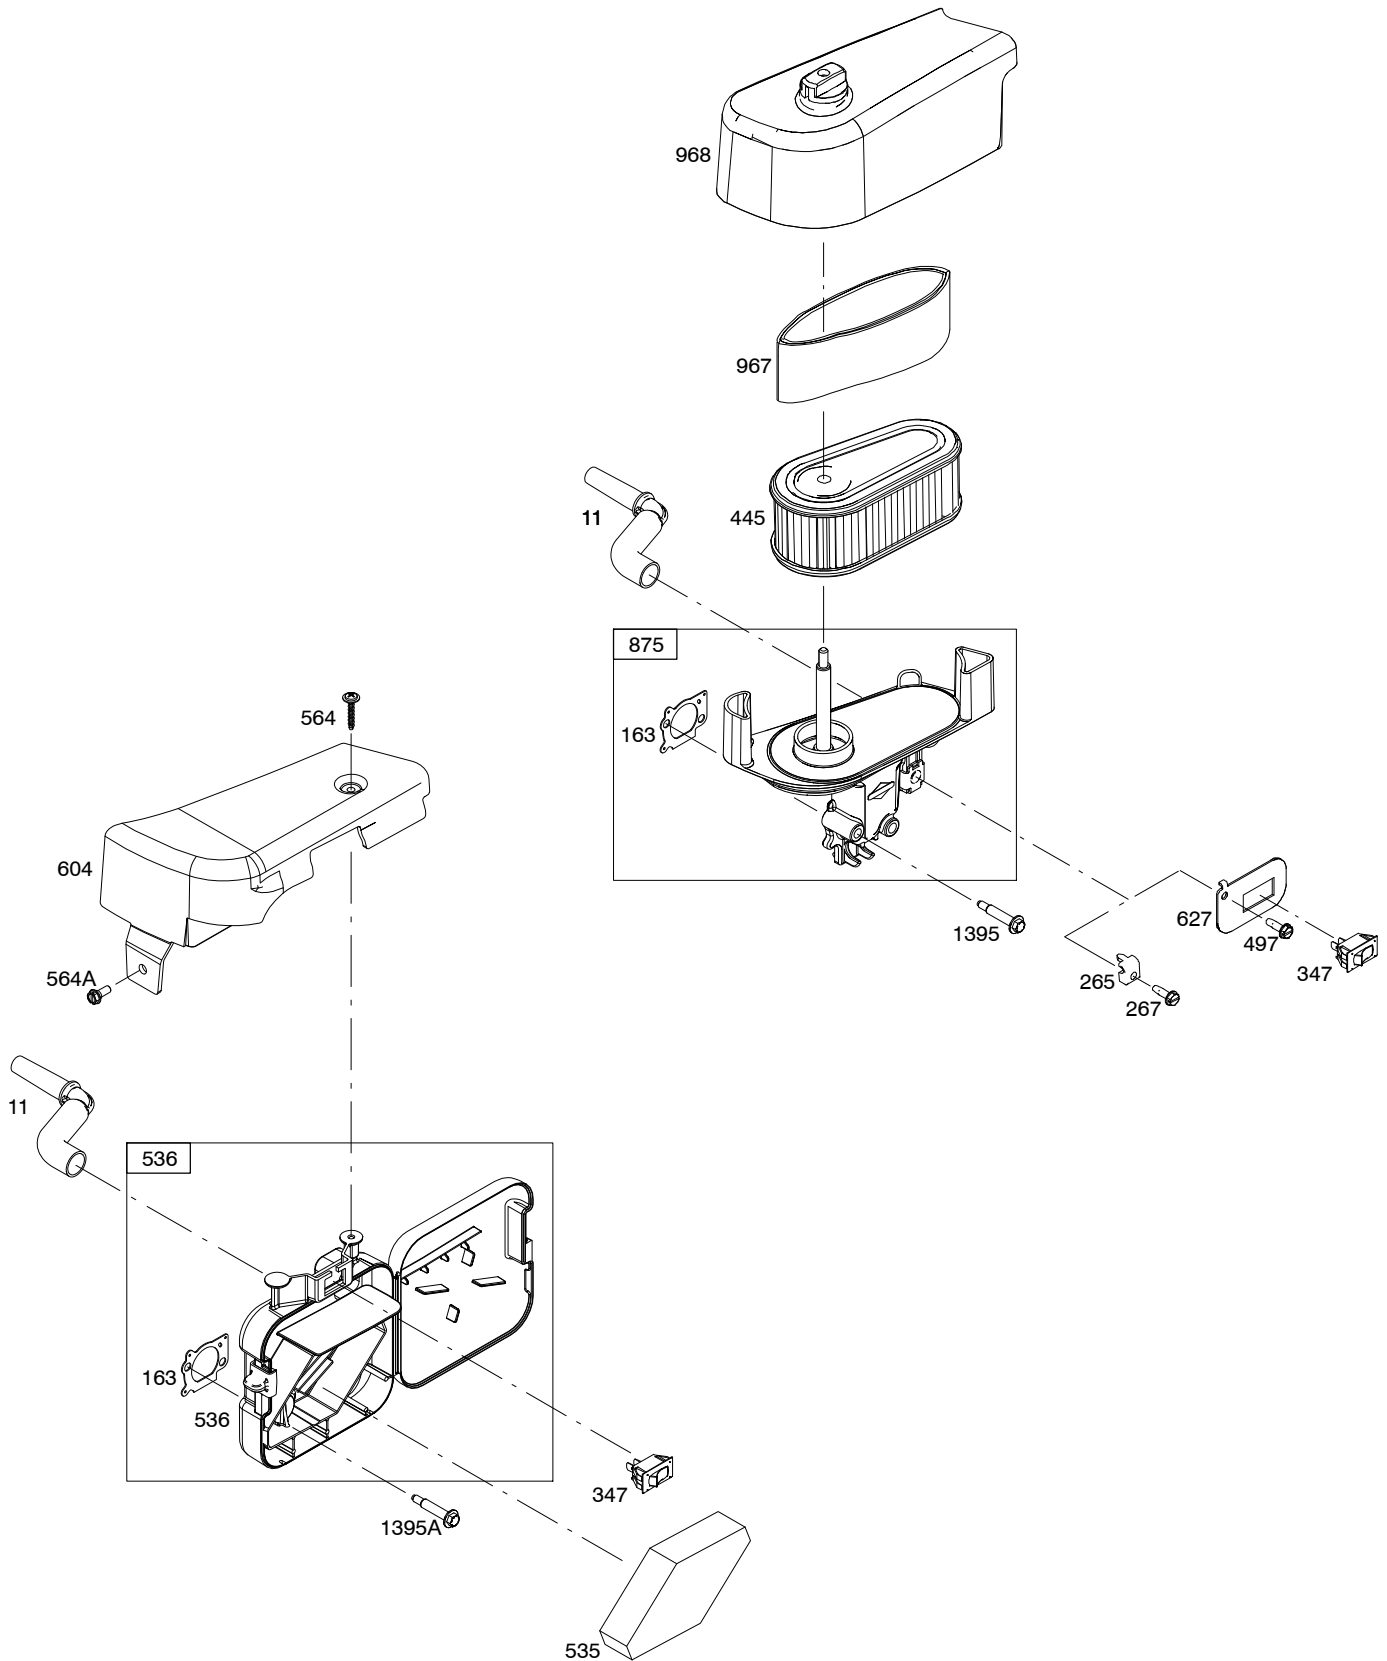


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

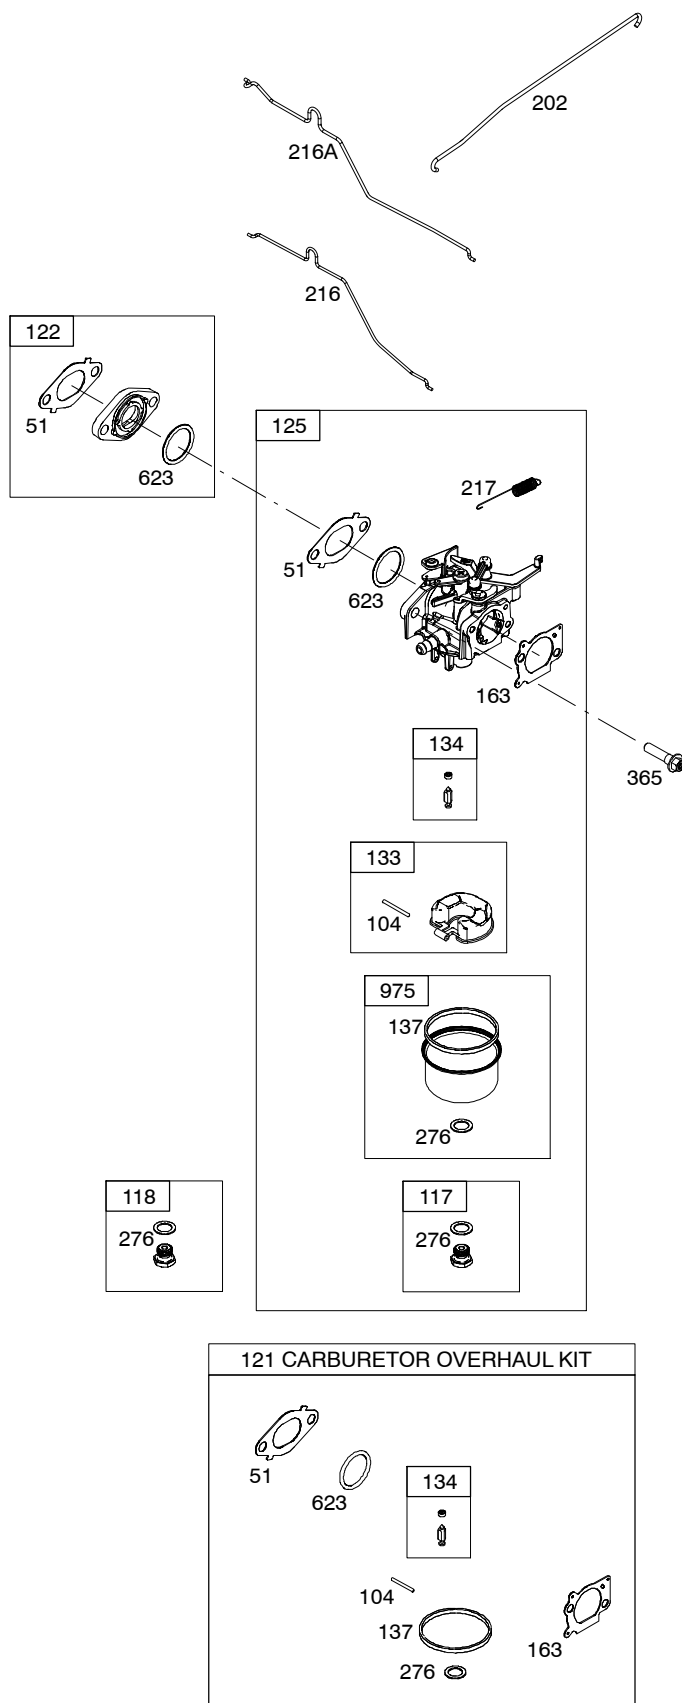

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

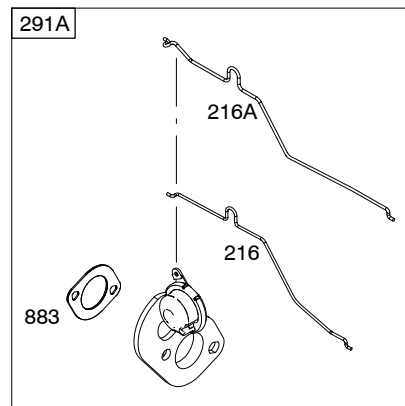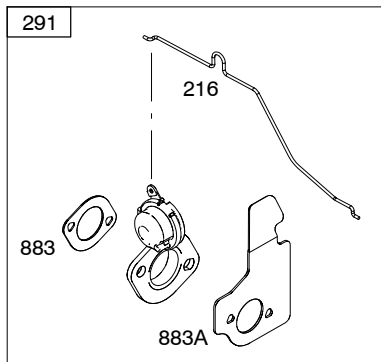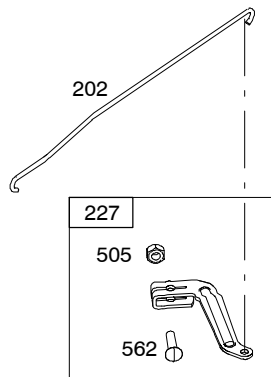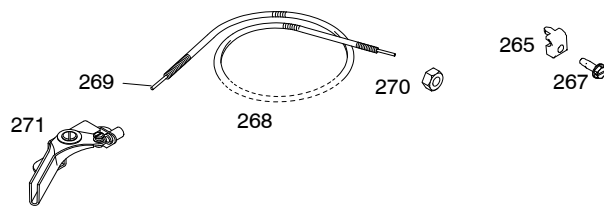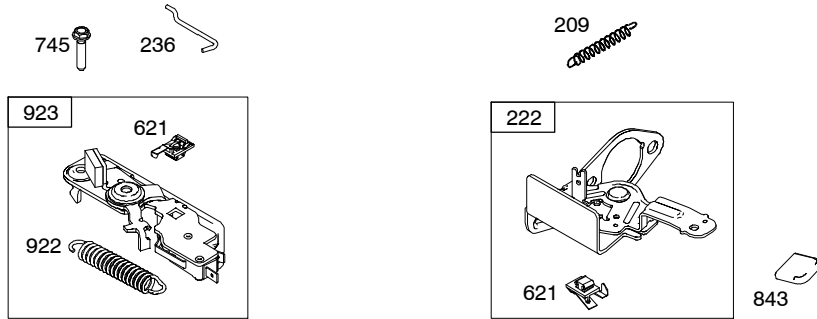

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

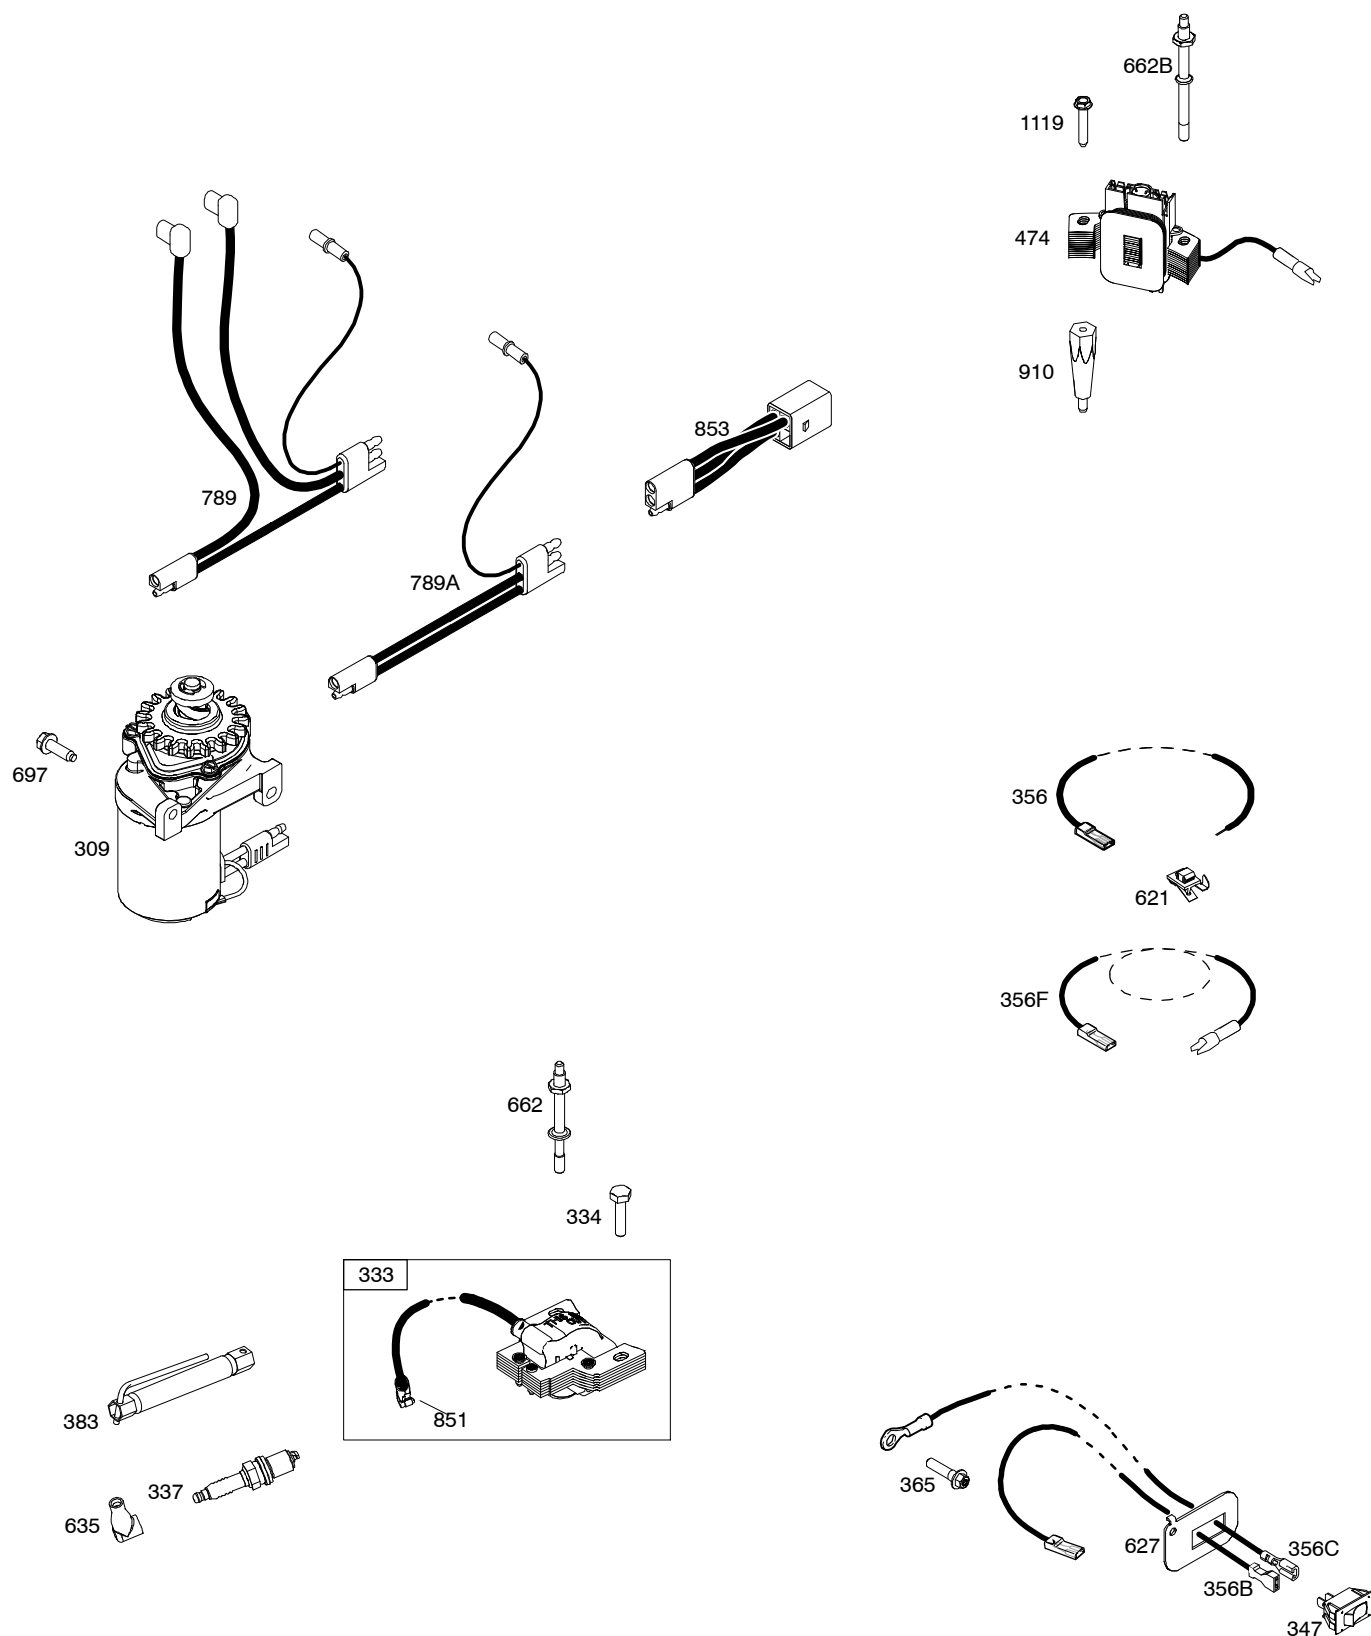

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

121S00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	796509	Cylinder Assembly ----- Note ----- 798947 Cylinder Assembly Used on Type No(s). 0064, 2415.	20	399781S	Seal-Oil (PTO Side)	33	499642	Valve-Exhaust
3	299819S	Seal-Oil (Magnetto Side)	22	691092	Screw (Crankcase Cover/Sump)	34	795443	Valve-Intake
4	493279	Sump-Engine Used on Type No(s). 0005, 0015, 0021, 0022, 0025, 0060, 0062, 0064, 0110, 0116, 0117, 0118, 0120, 0732, 1415, 2415. ----- Note ----- 498983 Sump-Engine Used on Type No(s). 0008, 0112, 0115.	23	796619	Flywheel (Aluminum) Used on Type No(s). 0015, 0021, 0025, 0030, 0060, 0062, 0063, 0110, 0114, 0116, 0119, 0732. ----- Note ----- 797386 Flywheel (Zinc) Used on Type No(s). 0064, 1415, 2415.	35	691304	Spring-Valve (Intake)
4B	692509	Sump-Engine Used on Type No(s). 0030, 0063, 0114, 0119.	23B	796623	Flywheel (Cast Iron) Used on Type No(s). 0005, 0008, 0022, 0112, 0115, 0117, 0118, 0120.	36	691304	Spring-Valve (Exhaust)
5	796471	Head-Cylinder	24	222698S	Key-Flywheel	37	796536	Guard-Flywheel Used on Type No(s). 0005, 0008, 0015, 0021, 0022, 0025, 0030, 0060, 0062, 0063, 0064, 0110, 0112, 0114, 0115, 0116, 0117, 0118, 0119, 0120, 0732, 1415, 2415.
7	796475	Gasket-Cylinder Head	25	797302	Piston Assembly (Standard) ----- Note ----- 797303 Piston Assembly (.020" Oversize)	37A	796534	Guard-Flywheel Used on Type No(s). 0005, 0008, 0015, 0021, 0022, 0025, 0030, 0110, 0112, 0115, 0117, 0118, 0120. ----- Note ----- 796535 Guard- Flywheel Used on Type No(s). 0060, 0062, 0063, 0114, 0116, 0119, 0732, 1415.
11	796478	Tube-Breather	26	797304	Ring Set (Standard) (Used After Code Date 09041900). ----- Note ----- 796641 Ring Set (Standard) (Used Before Code Date 09042000). 797305 Ring Set (.020" Oversize) (Used After Code Date 09041900). 796642 Ring Set (.020" Oversize) (Used Before Code Date 09042000).	37B	799242	Guard-Flywheel Used on Type No(s). 0064, 2415.
12	692232	Gasket-Crankcase				40	692194	Retainer-Valve
13	793451	Screw (Cylinder Head)				43	796525	Slinger-Governor/Oil Used on Type No(s). 0063, 0114, 0119. ----- Note ----- 796650 Slinger- Governor/Oil Used on Type No(s). 0005, 0008, 0015, 0021, 0022, 0025, 0060, 0062, 0064, 0110, 0112, 0115, 0116, 0117, 0118, 0120, 0732, 1415, 2415. 797179 Slinger- Governor/Oil Used on Type No(s). 0030.
15	691680	Plug-Oil Drain (Square Socket)						
16	796467	Crankshaft Used on Type No(s). 0022, 0064, 0117, 0118, 0120, 1415, 2415. ----- Note ----- 796468 Crankshaft Used on Type No(s). 0025, 0030, 0062, 0063, 0110, 0114, 0116, 0119. 796469 Crankshaft Used on Type No(s). 0005, 0008, 0015, 0060, 0112, 0115, 0732. 796924 Crankshaft Used on Type No(s). 0021.	27	691588	Lock-Piston Pin			
			28	298909	Pin-Piston			
			29	796470	Rod-Connecting			
			32	691664	Screw (Connecting Rod)			
17	692517	Bearing-Ball Used on Type No(s). 0063, 0114, 0119.	32A	695759	Screw (Connecting Rod)			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
45	690977	Tappet-Valve	118	494870	Jet-Main (High Altitude)	163	691894	Gasket-Air Cleaner
46	694039	Camshaft Used on Type No(s). 0005, 0008, 0015, 0021, 0022, 0025, 0060, 0062, 0064, 0110, 0112, 0115, 0116, 0117, 0118, 0120, 0732, 1415, 2415. ----- Note ----- 694040 Camshaft Used on Type No(s). 0030, 0063, 0114, 0119.			Used on Type No(s). 0005, 0008, 0015, 0021, 0022, 0025, 0030, 0060, 0062, 0063, 0110, 0112, 0114, 0115, 0116, 0117, 0118, 0119, 0120, 0732, 1415, 2415.	187	791766	Line-Fuel (Cut To Required Length)
51	796596	Gasket-Intake	121	796612	Kit-Carburetor Overhaul ----- Note ----- 799235 Kit-Carburetor Overhaul Used on Type No(s). 0064.	187A	796491	Line-Fuel (Formed Hose)
58	697316	Rope-Starter (88-5/8" Long) (Cut to Required Length)	122	796595	Spacer-Carburetor	192	796631	Adjuster-Rocker Arm
60	281434S	Grip-Starter Rope	125	796608	Carburetor Used on Type No(s). 0005, 0008, 0015, 0021, 0022, 0025, 0030, 0060, 0062, 0063, 0110, 0112, 0114, 0115, 0116, 0117, 0118, 0119, 0120, 0732, 1415, 2415. ----- Note ----- 799027 Carburetor Used on Type No(s). 0064.	202	796657	Link-Mechanical Governor
60A	795426	Grip-Starter Rope				209	793604	Spring-Governor Used on Type No(s). 0008, 0022, 0112, 0120. ----- Note ----- 796484 Spring- Governor Used on Type No(s). 0005, 0015, 0021, 0025, 0030, 0060, 0062, 0063, 0114, 0116, 0119, 0732, 1415, 2415. 796926 Spring- Governor Used on Type No(s). 0064, 0110.
73	798337	Screen-Rotating Used on Type No(s). 0116.				216	796485	Link-Choke Used on Type No(s). 0005, 0008, 0015, 0021, 0022, 0025, 0030, 0060, 0062, 0063, 0110, 0112, 0114, 0115, 0116, 0117, 0118, 0119, 0120, 0732, 1415, 2415.
75	691736	Washer (Flywheel) Used on Type No(s). 0015, 0021, 0025, 0030, 0060, 0062, 0063, 0064, 0110, 0114, 0116, 0119, 0732, 1415, 2415.	133	398187	Float-Carburetor ----- Note ----- 797626 Float- Carburetor Used on Type No(s). 0064.	216A	798944	Link-Choke Used on Type No(s). 01064.
78	793480	Screw (Flywheel Guard)	134	398188	Kit-Needle/Seat ----- Note ----- 799177 Kit- Needle/Seat Used on Type No(s). 0064.	217	798900	Spring-Choke Return ----- Note ----- 799179 Spring-Choke Return Used on Type No(s). 0064.
81	691740	Lock-Muffler Screw				222	796482	Bracket-Control (Manual Friction, Remote, & Fixed Speed Control)
104	797622	Pin-Float Hinge	137	796610	Gasket-Float Bowl ----- Note ----- 797625 Gasket-Float Bowl Used on Type No(s). 0064.			
117	697355	Jet-Main (Standard) Used on Type No(s). 0005, 0008, 0015, 0021, 0022, 0025, 0030, 0060, 0062, 0063, 0110, 0112, 0114, 0115, 0116, 0117, 0118, 0119, 0120, 0732, 1415, 2415. ----- Note ----- 799178 Jet-Main (Standard) Used on Type No(s). 0064.						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

121S00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
227	796487	Lever-Governor Control	304	796692	Housing-Blower (Rewind Start) Used on Type No(s). 0005, 0008, 0015, 0021, 0022, 0025, 0030, 0110, 0112, 0115, 0117, 0118, 0120.	334	793454	Screw (Magneto Armature)
236	691826	Link-Lockout Used on Type No(s). 0015, 0021, 0025, 0030, 0060, 0062, 0063.				337	692051	Plug-Spark Used on Type No(s). 0005, 0008, 0015, 0021, 0022, 0025, 0030, 0060, 0062, 0063, 0064, 0110, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0732, 1415, 2415.
238	691300	Cap-Valve			----- Note -----			----- Note -----
265	690798	Clamp-Casing			796693 Housing-Blower (Electric Start) Used on Type No(s). 0060, 0062, 0063, 0114, 0119, 0732, 1415.			692720 Plug-Spark Used on Type No(s). 0116.
267	691044	Screw (Casing Clamp)			798945 Housing-Blower (Electric Start) Used on Type No(s). 0064.	347	795333	Switch-Rocker Used on Type No(s). 0008, 0022, 0112, 0115, 0117, 0118, 0120.
268	691025	Casing-Control Wire (Cut To Required Length)				356	692390	Wire-Stop Used on Type No(s). 0005, 0110, 0114, 0116, 0119, 0732.
269	691026	Wire-Control (Cut To Required Length)			----- Note -----			----- Note -----
270	691027	Nut (Control Wire Casing)	304A	798333	Housing- Blower (Electric Start) Used on Type No(s). 0064, 0116.			796798 Wire-Stop Used on Type No(s). 0015, 0021, 0025, 0030, 0060, 0062, 0063.
271	691028	Lever-Control			799249 Housing-Blower (Electric Start) Used on Type No(s). 2415.	356B	692602	Wire-Stop Used on Type No(s). 0008, 0022, 0112, 0115, 0117, 0118, 0120.
276	271716	Washer-Sealing ----- Note ----- 797632 Washer-Sealing Used on Type No(s). 0064.	309	796842	Motor-Starter Used on Type No(s). 0060, 0062, 0063, 0114, 0116, 0119, 0732, 1415.	356C	695630	Wire-Stop Used on Type No(s). 0008, 0022, 0112, 0115, 0117, 0118, 0120.
291	796486	Thermostat Used on Type No(s). 0005, 0008, 0015, 0021, 0022, 0025, 0030, 0060, 0062, 0063, 0110, 0112, 0114, 0115, 0116, 0117, 0118, 0119, 0120, 0732, 1415.			----- Note ----- 799241 Motor-Starter Used on Type No(s). 0064, 2415.	356F	798332	Wire-Stop Used on Type No(s). 0064, 1415, 2415.
291A	798938	Thermostat Used on Type No(s). 0064, 2415.	332	690662	Nut (Flywheel)			
300	796495	Muffler-Exhaust Used on Type No(s). 0005, 0008, 0015, 0021, 0022, 0025, 0030, 0060, 0062, 0063, 0110, 0112, 0114, 0115, 0116, 0117, 0118, 0119, 0120, 0732, 1415.	333	796499	Armature-Magneto Used on Type No(s). 0015, 0021, 0025, 0030, 0060, 0062, 0063, 0110, 0114, 0116, 0119, 0732.			
300A	798940	Muffler-Exhaust Used on Type No(s). 0064, 2415.			----- Note ----- 796500 Armature-Magneto Used on Type No(s). 0005, 0008, 0022, 0064, 0112, 0115, 0117, 0118, 0120, 1415, 2415.			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
358	796661	Gasket Set-Engine	601	791850	Clamp-Hose	745	698557	Screw
363	19069	Puller-Flywheel	604	799024	Cover-Control			(Brake)
365	793458	Screw			Used on Type No(s).			Used on Type No(s).
		(Carburetor)			0064.			0015, 0021, 0025,
383	19576S	Wrench-Spark Plug	608	796497	Starter-Rewind			0030, 0060, 0062,
404	690272	Washer	613	796496	Screw			0063, 0110, 0114,
		(Governor Crank)			(Muffler)			0116, 0119, 0732.
445	795066	Filter-Air Cleaner	615	796674	Retainer-Governor	750	691147	Screw
		Cartridge			Shaft			(Oil Pump Cover)
455	796615	Cup-Flywheel	616	798327	Crank-Governor			Used on Type No(s).
		Used on Type No(s).	621	692310	Switch-Stop			0030, 0063, 0114,
		0005, 0008, 0022,	623	793628	Seal-O Ring			0119.
		0112, 0115, 0117,			(Carburetor Spacer)	789	792685	Harness-Wiring
		0118, 0120.	627	796702	Bracket-Stopsch			Used on Type No(s).
474	794103	Alternator			Used on Type No(s).			0060, 0062, 0063,
		Used on Type No(s).			0008, 0022, 0112,			0114, 0116, 0119,
		0060, 0062, 0063,			0115, 0117, 0118,			0732.
		0064, 0116, 1415,	635	66538S	Boot-Spark Plug	789A	696546	Harness-Wiring
		2415.	662	796537	Stud			Used on Type No(s).
497	691044	Screw			(Rewind Starter)			0064.
		(Stopswitch Bracket)	662A	793479	Stud	830	796472	Stud-Rocker Arm
		Used on Type No(s).			(Rewind Starter)	832	796494	Guard-Muffler
		0008, 0022, 0112,	662B	797002	Stud			Used on Type No(s).
		0115, 0117, 0118,			(Rewind Starter)			0008, 0030, 0063,
		0120.			(Used With Alternator			0110, 0112, 0114,
505	793515	Nut			Only)			0115, 0116, 0117,
		(Governor Control	670	793485	Spacer-Fuel Tank			0118, 0119, 0120,
		Lever)	676	692010	Deflector-Muffler			1415.
523	796503	Dipstick	676A	799187	Deflector-Muffler	832A	798951	Guard-Muffler
524	692296	Seal-Dipstick Tube			Used on Type No(s).			Used on Type No(s).
525	796502	Tube-Dipstick			0064.			0064, 2415.
535	797301	Filter-Air Cleaner	677	690661	Screw	836	793500	Screw
		Foam			(Muffler Deflector)			(Muffler Guard)
		Used on Type No(s).	697	691127	Screw	842	691031	Seal-O Ring
		0064.			(Drive Cap)			(Dipstick Tube)
536	799025	Cleaner-Air			Used on Type No(s).	843	691884	Sleeve-Lever
		Used on Type No(s).			0060, 0062, 0063,			Used on Type No(s).
		0064.			0064, 0114, 0116,			0005, 0015, 0021,
562	793514	Bolt			0119, 0732, 1415,			0025, 0030, 0060,
		(Governor-Control			2415.			0062, 0063.
		Lever)	718	690959	Pin-Locating	847	796501	Dipstick/Tube
564	690351	Screw	737	692511	Screw			Assembly
		(Control Cover)			(Oil Filter Adapter)	851	493880S	Terminal-Spark Plug
		Used on Type No(s).			Used on Type No(s).	853	696842	Adapter-Wire
		0064.			0030, 0063, 0114,			Used on Type No(s).
564A	799026	Screw			0119.			0060, 0062, 0063,
		(Control Cover)	741	795755	Gear-Timing			0064, 0114, 0116,
		Used on Type No(s).			----- Note -----			0119, 0732, 1415.
		0064.			797521 Gear-Timing	868	795440	Seal-Valve
592	793481	Nut			Used on Type No(s).	875	796492	Base-Air Cleaner
		(Rewind Starter)			0064.			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

121S00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
883	793497	Gasket-Exhaust	967	796254	Filter-Pre Cleaner	1055	796524	Tube-Oil Pump
883A	796677	Gasket-Exhaust	968	796493	Cover-Air Cleaner			Used on Type No(s).
886	796474	Gasket Kit-Cylinder Head Plate	972	796489	Tank-Fuel (EVAP)			0030, 0063, 0114, 0119.
910	796498	Stud (Alternator)	975	796611	Bowl-Float	1058	278415	Manual-Operator's
		Used on Type No(s).			----- Note -----	1059	793471	Kit-Screw/Washer
		0060, 0062, 0063, 0064, 0116, 1415, 2415.			797631 Bowl-Float	1095	796662	Gasket Set-Valve
914	794451	Screw (Rocker Arm Cover)			Used on Type No(s).	1119	794100	Screw (Alternator)
921	798356	Cover-Blower Housing	988	692515	Gasket-Oil Adapter			Used on Type No(s).
		Used on Type No(s).			Used on Type No(s).			0060, 0062, 0063, 0064, 0116, 1415, 2415.
		0116.			0030, 0063, 0114, 0119.	1263	697124	Reed-Breather
922	692135	Spring-Brake	993	796473	Gasket-Cylinder Head Plate	1264	793453	Screw (Breather Reed)
		Used on Type No(s).				1319	794467	Label-Warning
		0015, 0021, 0025, 0030, 0060, 0062, 0063, 0110, 0114, 0116, 0119, 0732.	1005	796614	Fan-Flywheel	1330	276781	Manual-Repair
					Used on Type No(s).	1375	796476	Cover-Breather/Reed
923	796635	Brake			0005, 0008, 0022, 0112, 0115, 0117, 0118, 0120.	1376	794451	Screw (Breather/Reed Cover)
		Used on Type No(s).	1022	796480	Gasket-Rocker Cover	1395	690349	Screw (Air Cleaner Base to Carburetor)
		0015, 0021, 0025, 0030, 0060, 0062, 0063, 0110, 0114, 0116, 0119, 0732.	1023	796479	Cover-Rocker Arm			Used on Type No(s).
925	796531	Cover-Linkage	1024	692508	Pump-Oil			0005, 0008, 0015, 0021, 0022, 0025, 0030, 0060, 0062, 0063, 0110, 0112, 0114, 0115, 0116, 0117, 0118, 0119, 0120, 0732, 1415, 2415.
		Used on Type No(s).			Used on Type No(s).			
		0005, 0008, 0022, 0064, 0112, 0115, 0117, 0118, 0120, 1415, 2415.	1026	796481	Rod-Push	1395A	798294	Screw (Air Cleaner Base to Carburetor)
943	692514	Seal-O Ring (Oil Pump Cover)	1027	795990	Filter-Oil			Used on Type No(s).
		Used on Type No(s).			Used on Type No(s).			0064.
		0030, 0063, 0114, 0119.			0030, 0063, 0114, 0119.	1430	796477	Gasket-Breather/Reed
957	796577	Cap-Fuel Tank (EVAP)	1028	796522	Adapter-Oil Filter			
					Used on Type No(s).			
965	692507	Cover-Oil Pump			0030, 0063, 0114, 0119.			
		Used on Type No(s).	1029	691230	Arm-Rocker			
		0030, 0063, 0114, 0119.	1034	691343	Guide-Push Rod			
			1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)			

