



Congratulations on the successful assembly of your foundation. Now you are ready to assemble your SLEEP NUMBER® mattress. It can be quickly and easily completed without tools.

before you begin

Carefully Check the Contents of Your Mattress Boxes

If you are missing any items listed on the following page, please e-mail Customer Service at customerservice@selectcomfort.com or call 1-800-472-7185.

Orientation

These instructions refer to "left" and "right" as if you are standing at the head of the bed looking toward the foot of the bed.

Prepare Your Foam Pad(s)


If you purchased a bed with Foam Comfort Pad(s) and/or a Foam Base Pad, carefully open the pad(s) and set aside. At least 20 minutes of expansion time is needed.

Using a Surge Protector

To protect your Firmness Control® System against unexpected power surges we recommend using a surge protector that is listed to UL® 1449 with a clamping voltage of 330 volts, and a joule rating of 700 or higher. The Firmness Control® System can be plugged directly into a wall outlet; however, a surge protector provides added protection for your electronics. Please note your 20-Year Limited Warranty does not cover damage to the Firmness Control® System due to a power surge, regardless of source. See the Limited Warranty on page 15 for more details.

Waterbed Conversion

If you purchased a waterbed replacement mattress, please refer to pages 8-9 for specific assembly instructions.
NOTE: California King Size follows instructions on page 7.




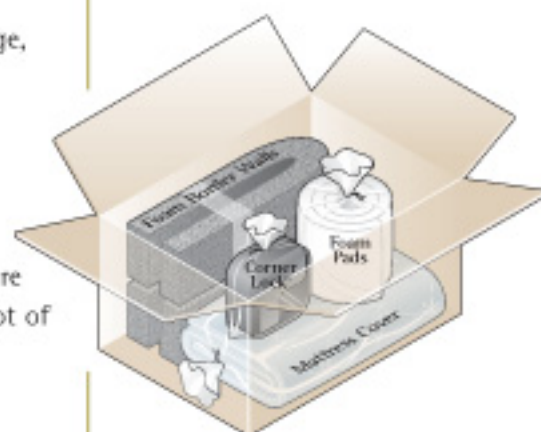


It is wonderful! After only one night, we both commented that we had the best night's sleep in years!

*Lowell S.
Flagstaff, AZ*

Important Note!


contents

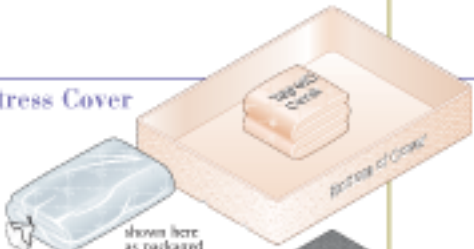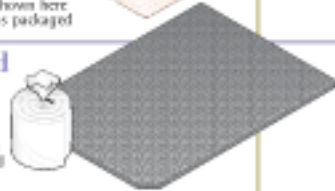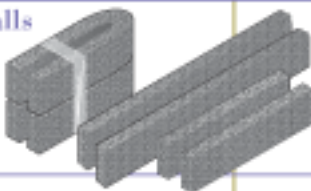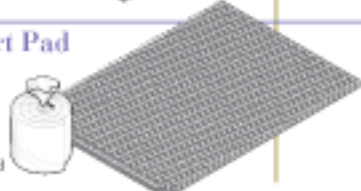		Model Number				
		3000	4000	5000	7000	9000
Mattress Cover 	 shown here as packaged					
Foam Base Pad 	 shown here as packaged					
Foam Border Walls 2 long, 2 short 	 shown here as packaged					
Corner Lock™ Package of 4 	 shown here as packaged					
Air Chambers 2 for dual chamber models, 1 for single chamber models 						
Firmness Control™ System with Remote See p.10 for remote control operation 						
Center Foam Wall Dual chamber models only 						
Foam Comfort Pad Color may vary 	 shown here as packaged					

If you are missing any items, please e-mail Customer Service at customerservice@selectcomfort.com or call 1-800-472-7185.


1 Position Mattress Cover

- Place MATTRESS COVER (quilted side up) on top of the foundation or bed platform.
- Unzip the top of the cover and set it aside. For the 7000 & 9000 models, unzip the lower DUVET zipper (A) first, then set Duvet aside.
- Holes in the bottom of the cover should be at the head of the mattress and the SLEEP NUMBER® bed label will be at the foot of the mattress.
- Place a CORNER LOCK® in each corner of the mattress cover.

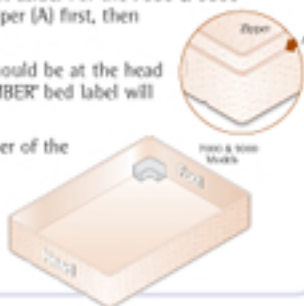

2 Install Foam Border Walls


- Place the two long FOAM BORDER WALLS along the left and right sides of the Mattress Cover. The ends of the Foam Border Walls should fit snugly inside the Corner Lock® and run the entire length of the bed.
- Place the shorter Foam Border Walls in between the longer border walls at the head and foot of the bed.
- Make sure the border walls are connected securely and squarely.

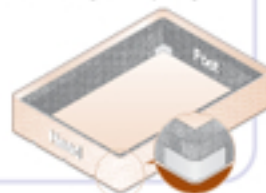

3 Install Foam Base Pad

5000, 7000 and 9000 Models only


- Carefully shake out the pad prior to placing in position.
- Place the FOAM BASE PAD inside the mattress cover with the clipped ends at the head of the bed. The pad should be evenly positioned between the Foam Border Walls.

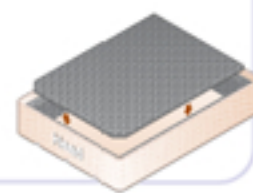

4 Install Air Chamber(s)

- Lay the AIR CHAMBER(s) in the mattress cover so the Hose Connector(s) are on the bottom and face the head of the bed.
- Connectors will roughly align with the small openings at the base of the mattress cover.


Dual chamber model shown.

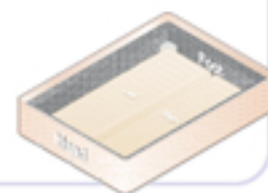

5 Connect Firmness Control™ System


3000, 4000 and 5000 Models

- Place the FIRMNESS CONTROL™ SYSTEM on the floor at the head of the bed and plug the power cord into an electrical outlet. (5000 Model: also plug the power cord into the Firmness Control™ System.)
- Pass the end of each hose through the small opening at the base of the Mattress Cover and under the Foam Border Wall to its corresponding chamber. (The hose marked "L" connects to the left chamber, unmarked hose to the right.)
- Press hose connections together until they "click."

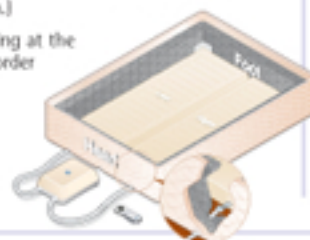

7000 and 9000 Models

- Place the Firmness Control™ System on the floor at the head of the bed. Plug the power cord into the Firmness Control™ System and then into an electrical outlet. (You will hear several clicks indicating there is power.)
- There are two hoses for each air chamber. Pass the end of each hose through the small opening at the base of the Mattress Cover and under the Foam Border Wall to the corresponding chamber. Connect the 2 hoses on the left side of the pump (see image) to the left air chamber. (One or both of the hoses will be marked with an "L"). Connect the 2 unmarked hoses on the right side of the pump to the right air chamber.
- Press hose connections together until they "click."

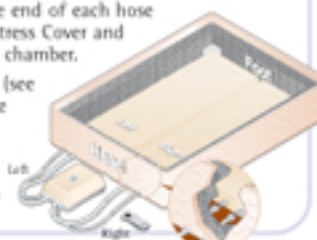

6 Inflate Air Chamber(s)


- If using the Firmness Control™ System 5000, 7000 or 9000, press any button on the remote to activate the hand control. (If using the wireless remote with L and R buttons, press L or R to activate and choose a side.) Press the Δ arrow several times to set the firmness to "20." Inflation may take about 10 minutes. (For all other Firmness Control™ Systems, press L or R to choose a side, then press and hold the "firmer" button on the remote to begin inflating the mattress.)
- For dual chamber models, after the first chamber is inflated, repeat for second chamber. Then, insert the CENTER FOAM WALL between the chambers, centering it between the head and foot of the bed.



7 Install Foam Comfort Pad


4000 and 5000 Pillowtop styles only

- Carefully shake out the pad prior to placing in position.
- Place the FOAM COMFORT PAD on top of the Air Chamber(s) with the "zones" facing up and clipped ends at the head of the bed. The pad should rest on top of the air chamber(s).

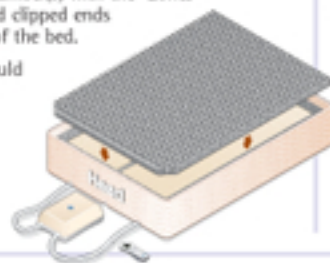


7000 & 9000 Models only

- Zip the Duvet cover onto the mattress (Zipper A).
- Unzip the top Duvet zipper (B) and set aside.
- Carefully shake out pad prior to placing in position.
- Place the Foam Comfort Pad inside the Duvet pocket with the punched holes facing up.

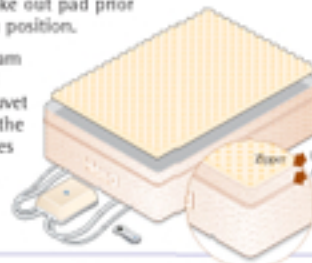

9000 Model

Each sleeper can customize their side of the mattress by choosing how to position the foam pads. Place the MEMORY FOAM side on top for a more firm, supportive surface. Place the "Intralux" foam side on top for a more plush surface.

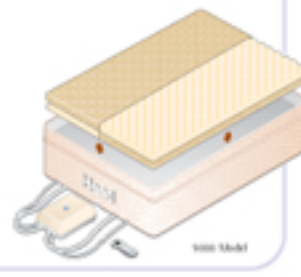

8 Final Steps


3000, 4000 and 5000 Models only

- Zip on the top of the Mattress Cover.
- Move the bed to your desired location.



7000 and 9000 Models only

- Zip on the Duvet cover (Zipper B).
- Move bed to your desired location.

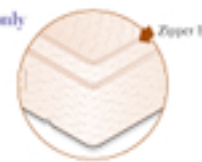

You're Done!
Now go to the Finding Your Comfort Level section to customize your Sleep Number® bed.